

EXTERIOR PROTECTIONBody side embellishers

REMOVAL

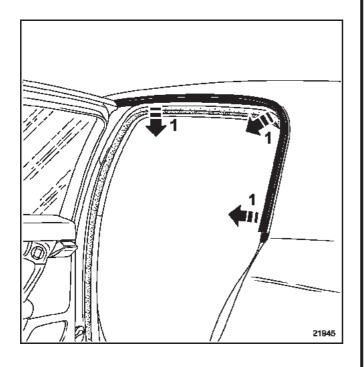


Using the tool (Car. 1363), unclip the trim (1).

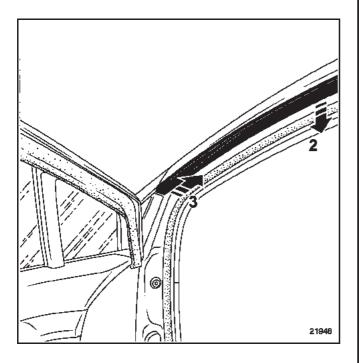


Unclip trim (2).

Remove trim (3).

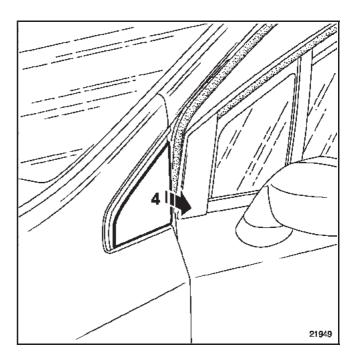

Unclip the front wing trim (4).

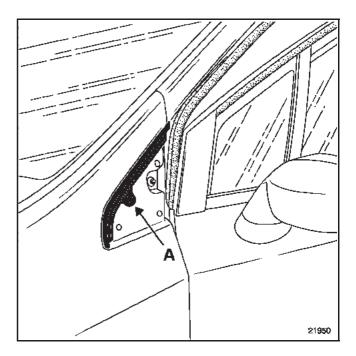

Remove clip (A).

Release the chrome strip.

REFITTING

Before refitting the trims, the retaining clips will have to be replaced.